



GB	INSTRUCTIONS FOR USE	2
FR	MODE D'EMPLOI	5
DE	GEBRAUCHSANWEISUNG	8
NL	GEBRUIKSAANWIJZING	11
ES	INSTRUCCIONES DE USO	14
IT	ISTRUZIONI PER L'USO	17
PT	INSTRUÇÕES DE UTILIZAÇÃO	20
GR	ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ	23
NW	BRUKSANVISNING	26
DK	BRUGSANVISNING	29

FN	KÄYTTÖOHJE	32
SW	BRUKSANVISNING	35
PL	INSTRUKCJA UŻYCIA	38
HU	HASZNÁLATI ÚTMUTATÓ	41
RO	MOD DE UTILIZARE	44
CZ	NÁVOD K POUŽITÍ	47
RU	ИНСТРУКЦИЯ ПО ПРИМЕНЕНИЮ	50
TK	KULLANIM TALİMATI	53
JP	使用説明書	56



Thank you for choosing Master Lock to store all your important documents and valuables.

We hope that this product will help you stay organized and provide you with the peace-of-mind of knowing the things most important to you are protected.

WATERPROOF FIRE-RESISTANT CHESTS

Your Master Lock Product

Your Master Lock product has a number of features to keep your important documents and valuables protected including:



Water Protection



UL Classified
Fire Protection



Digital Media Protection

FIRE SPECIFICATIONS

Fire Endurance

(UL Classified protection) Subjected to temperatures up to 843°C (1550°F) for a duration of 1/2 hour, the chest interior will remain below 177°C (350°F).

Explosion Hazard


(UL Classified protection) Subjected to a flash fire in a 1093°C (2000°F) furnace for 30 minutes the unit will not explode or rupture.

Data Protection


(ETL Verified) 1/2 hour fire protection of CDs, DVDs, memory sticks and USB drives up to 843°C (1550°F). This product is NOT intended to protect computer floppy or diskettes, cartridges, tapes, audio or video cassettes, or photo negatives.

BATTERY INSTALLATION

- 1 Insert a credit card, identification card, or another card of a similar size in the center slot of the battery cover. Once inserted, remove the card, the battery cover will pop out attached to your card.

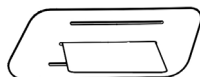

- 2 Insert a new 9 volt Alkaline battery in the indicated area.

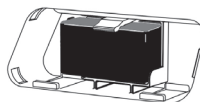

- 3 Reinstall the battery cover by inserting the left side with the two tabs first.




• **NOTE:** Do not use rechargeable batteries or any other type of non-alkaline battery.

- **NOTE:** Store code in a secure location (other than in the chest).
- **NOTE:** Master Lock offers a secure on-line location for the entry and retrieval of your code. Go to [www.masterlock.com](#) and register your product.

1 To Open




For first time use, enter the factory code, located on the back of this owners manual, on the keypad. A green LED light will flash to indicate acceptance of entry. Please allow for a brief delay for the lock to actuate.

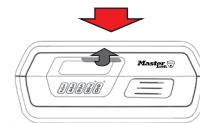

Press down on lid and pull up on latch.



- **NOTE:** If an incorrect code is entered three times, the chest will enter lockout mode. (Red LED blinks slowly for two minutes.) Please refer to troubleshooting.

2 To Close

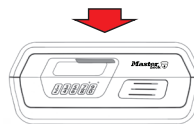

Press down on lid.
Your chest is now securely locked.

PROGRAMMING OR RESETTING YOUR PERSONAL CODE

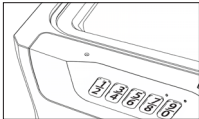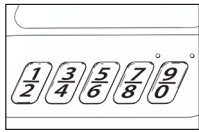- 1 Open the chest. Use a thin object like a straightened paperclip to press and hold the reset button, located on the top of the keypad, until the green LED flashes.
 
- 2 Enter a new 4-6 digit personal code on the key pad. The chest will acknowledge each acceptable keypress when green LED flashes.
 - **NOTE:** The chest will time out and the red light will flash if there is no key entry within 10 seconds.
- 3 If the new personal code is 6 digits, the chest will accept it immediately. If the new personal code is 4 or 5 digits, the code will be accepted 10 seconds after the last key press. The red light will flash after 10 seconds if fewer than 4 digits are entered and the chest will go into Standby mode.
- 4 Once the new personal code is accepted, the chest will automatically save and exit to Standby mode without additional indication.
- 5 Test the personal code before closing the chest. If the code is invalid, repeat steps 1-4.
 - **NOTE:** The personal code programmed will not be erased when the battery power is removed.

CONFIDENTIAL

Write down personal code, and keep it in a secure location.


Or visit www.registermysafe.com to store your personal code combinations.

Troubleshooting

THE PROBLEM:	WHY IT IS HAPPENING:	THE SOLUTION:
Red LED blinks three times	Incorrect code has been entered/ programming error	Verify the code and re-enter or reprogram
	Programming error	
Red LED slowly blinks for two minutes	An incorrect code has been entered three times, chest is in lockout mode	Wait for two minutes, re-enter personal or factory code
Yellow LED blinks once every thirty seconds	Battery power is low	Replace with 9 volt alkaline batteries (do not use rechargeable or any other type of non-alkaline battery)
No LED indication when pressing key pad buttons	Power failure	Replace with 9 volt alkaline batteries (do not use rechargeable or any other type of non-alkaline battery)

ENABLING/DISABLING KEYPAD SOUND

- 1 To enable or disable the sound of the keypad, press and hold the 1 and 9 on the keypad simultaneously for 3 seconds.
- 2 If the sound is enabled, the green LED light will flash and the beeper will sound. If the sound is disabled, the green LED will flash but have no sound.

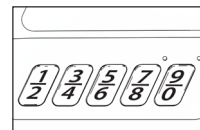



! IMPORTANT INFORMATION

- If you experience problems or challenges with your product, please contact us. Many issues can be quickly resolved without the product being returned.



- This product is not intended for the secure storage of all materials. **Items such as firearms, other weapons, combustible materials, or medication should NOT be stored in this unit.**

- **DO NOT store delicate items directly in your fire and waterproof chest.**

Master Lock products which offer fire protection have a proprietary insulation that has a high moisture content. In addition, the fire and water proof chests close airtight to offer water resistance, which may also cause moisture to accumulate inside your chest. Please open your unit once every two weeks to avoid moisture accumulation.

If you choose to store delicate items such as jewelry with working parts, watches, stamps, or photos in your chest, we recommend putting them in an air-tight container, prior to placing them in the chest for storage.

- **NOTE:** Master Lock will not be responsible for any damage or loss of items placed in the unit due to moisture
- **DO NOT store pearls in this chest.** In the event of a fire, potential damage to delicate pearls occurs at temperatures much lower than the 177°C (350°F) interior performance measure which the UL classification performance standard indicated guarantees. Therefore, **DO NOT** store pearls in your Master Lock product.
- **DO NOT store computer disks, audio-visual cassettes or photo negatives.** This product is not intended to protect computer floppy or diskettes, cartridges and tapes, audio or video cassettes or photo negatives.

REGISTRATION

www.registermysafe.com

By registering your Master Lock product you can easily retrieve forgotten codes and combinations. By registering your Master Lock product you can be sure that in the unfortunate circumstance of a fire you will be guaranteed your replacement product (provided official paperwork has been completed).

CUSTOMER SERVICE

www.masterlock.eu/contact-us/helplines

safes@masterlock.eu

LIMITED LIFETIME AFTER-FIRE REPLACEMENT PROGRAM

If this product is damaged by fire at any time while still owned by you, the original, registered owner (the original purchaser), Master Lock will ship a replacement, at Master Lock's own and sole discretion.

To be eligible for this Limited Lifetime After-Fire Replacement Program, the original purchaser must have registered the product within 30 days of purchase, online at www.registermysafe.com. Do not ship your product back to Master Lock.

To obtain service under the Limited Lifetime After-Fire Replacement Program, please contact Master Lock Customer Care: safes@masterlock.eu.

Please make sure you join following elements to your request:

- 1) A description of the fire event; 2) unit model number; 3) serial number; 4) a photo of the burned unit; and 5) a copy of the report from the fire department, insurance or police.

THIS AFTER-FIRE REPLACEMENT PROGRAM IS LIMITED TO REPAIR OR REPLACEMENT ONLY. The limited warranty does not cover labor for removing, reinstalling or refinishing the product or part, or other materials removed, reinstalled or refinished in order to repair or replace the product or part. TO THE EXTENT PERMITTED BY LAW, MASTER LOCK DISCLAIMS ALL OTHER IMPLIED OR EX-PRESS WARRANTIES INCLUDING ALL WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT ANY IMPLIED WARRANTIES MAY NONETHELESS EXIST BY OPERATION OF LAW, SUCH WARRANTIES ARE LIMITED TO THE DURATION PROVIDED BY LAW.



Got a question?

If you ever have any questions regarding your Master Lock product, please visit our website www.masterlock.eu.