

EURO VAULT Installation Instructions



Euro Vault freestanding safes are designed to be positioned and secured to the floor.

There is the option of fixing to the wall.

Please read all instructions before commencing installation

Location:

The decision on where to site and install your Euro Vault should take all possible attack methods into consideration.

Where possible fix the safe so as to restrict access to the bottom, sides and top.

When fixing the safe to the floor against a wall, any obstacles such as skirting board should be removed so there is no gap between the back of the safe and the wall.

Select a good sound level floor onto which to fix your safe and ensure that no services will be interfered with during fitting.

The safe must be anchored to the floor through the fixing holes provided in the base. Further securing positions at the rear allow for additional fixing.

The type of fixing bolt to be used depends on the structure to which the safe is to be anchored.

The Euro Vault is supplied with coach screws and nylon plug fixings but if fixing to particular structures (where other types of fixing are better suited) it will be necessary to purchase specific fixing bolts.

- Using the safe as a template, mark fixing positions on surface to be drilled.
- Ensure that full access to the safe will be possible when mounted in this position.
- Reposition safe, insert fixings and tighten as necessary.

The safe is equipped with either an electronic keypad with override key or a Euro cylinder lock with 2 keys.

Keep the override key or spare key in a secure place - not in the safe.