



Euro Vault Safe Installation Instructions

The Securikey 'Euro Vault' Freestanding Safes are designed to be positioned and secured to the floor with optional additional wall fixing.

Please read all instructions before commencing installation!

Location:

The decision on where to site and install your Security Euro Vault should take into consideration making possible attack methods more difficult. Where possible site the safe so as to restrict access to the Bottom, Sides and Top. When fixing the safe to the floor up and against a wall, any obstacles such as skirting board should be removed so there is no gap between the back of the safe and the wall.

Select a good sound level floor to which to install your safe, ensuring that the floor will support the required loading and that no services will be interfered with during fitting.

The safe must be anchored to the floor through the fixing holes provided in the base; there are also securing points at the rear to provide additional fixing. The type of fixing bolt to be used depends on the structure to which the cabinet is to be anchored. The cabinet is supplied with commonly used anchor bolts, but if fixing to particular structures where other types of fixing are better suited, it will be necessary to buy specific fixing bolts, which can normally be found in any hardware store.

- Using the safe as a template, mark fixing positions on surface to be drilled.
- Ensure that full access to the safe will be possible when mounted in this position.
- Reposition safe, insert fixings and tighten as necessary.

The safe is equipped with either an electronic keypad with over-ride key or a euro cylinder lock with 2 keys.

Keep the over-ride key or spare key in a secure place not in the safe.

For further assistance please contact your local stockist or alternatively contact:

Securikey Limited, PO Box 18, Aldershot, Hampshire GU12 4SL

Telephone: 01252 311888/9 Facsimile: 01252 343950

Email: enquiries@securikey.co.uk

<http://www.securikey.co.uk>