

EURO VAULT GAS STRUT - USER INSTRUCTIONS

The Euro Vault operates on the simple principle that whatever code is used to lock the safe then this code needs to be used to open the safe. After each opening the previously used Personal Code is erased.

VAULT PREPARATION PRIOR TO USE

When your Euro Vault Gas Strut Safe is delivered the door will be closed and without batteries fitted.

Lift the door open, remove the battery cover and install the batteries ensuring that they are seated correctly. Once you hear a single 'Beep' then refit the battery cover.

LOCKING WITH A PERSONAL CODE

- Hold the door closed and key in a 4-digit, 5-digit or 6-digit code followed by #. The display will read "CLOSED" as the locking bolts extend. When the door is safely locked, the screen will again display the code digits you have just entered and clear after a few seconds.
- The same personal digit code can be used repeatedly.

Please practice with the door open to ensure full familiarity with its function.

OPENING WITH A PERSONAL CODE

- Key in the 4-digit, 5-digit or 6-digit code previously used to close the safe. Confirmation of the numbers entered will be shown on the display and the display will then read "OPENED" as the bolts retract automatically and the door will open.
- If an incorrect code is entered then the display will read "ERROR" and the lock emits a series of 'Beeps'.
- If an incorrect code is entered 4 times the safe will lock out for 15 minutes and entry can only be made during this time using the key lock.

Note. The display reads "Hold15...Hold14"...etc. as it counts down. The programmed personal code is retained following this countdown.

MASTER CODE

- The Master Code provides override access irrespective of the Personal Code and allows entry if the personal code is forgotten.
- The default Master Code is 011223 but this code must be changed prior to using the safe.
- To use the Master Code, key in the 6 digit combination code. The locking bolts will retract and the display will read "OPENED". The Master Code will not lock the safe.

CHANGING THE MASTER CODE

- When the safe is open, press "* *" and the display will read "PROG".
- After "PROG" disappears, enter programmed Master Code (Initially the code will be the default code of "011223") and the display will read "NEW".
- Key in your chosen 6 digit combination within five seconds, the display will read "AGAIN".
- Once again key in the chosen 6 digit Master Code and the display will read "DONE" indicating that you have successfully changed the Master code.

Please practice with the door open to ensure full familiarity with its function.

WARNING: Always remember and keep a record of your new Master Code as further master code changes cannot be made without it.

EMERGENCY KEY LOCK

In case of an emergency the safe can be opened with over-ride key.

- To access the keyway peel back the top right-hand corner of the keypad.
- Insert the key in the keyway with the dimple on the bow in the 6 o'clock position and rotate the key anti-clockwise 90 degrees to the 3 o'clock position. This action retracts the locking bolts and allows the door to open.

LIGHT FITTING – REPLACING BATTERIES

- To renew the light batteries open the Vault and remove the retaining screw on the left-hand side of the light fitting.
- Remove the light fitting to gain access to the battery cover on the rear of the fitting.
- Replace 2 * AA batteries and re-assemble the components.