

EM2020 USER INSTRUCTIONS



OPEN

fig. A



ADD SECOND USER


 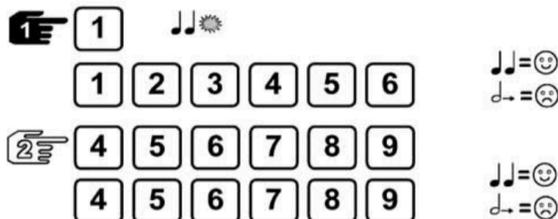


fig. B



CHANGE FACTORY SET CODE

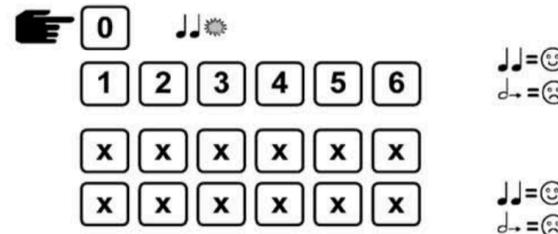


fig. C



DELETE SECOND USER

fig. D



NOTE:
 = press and hold until double signal and light stays ON

ENGLISH

The lock operates with a numeric six-digit code or a word with 6 letters. A secondary code can be added. Each key press is confirmed with an audio and light signal.

GENERAL

After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

Open: (see fig. A)

Enter code (factory code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. If code entry failed on first attempt wait 20 seconds before re-entering. Three long beeps indicate the lock bolt is jammed. Release the handle and re-enter code.

Locking:

Close door and turn handle fully to closing position. The lock is secured. Control blocking status by trying to turn handle back.

Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

Activate the second opening code: (see fig. B)

Press and hold Key [1] until double signal. The light remains on during the following actions.

- Enter main code.
- Enter Secondary code twice (Double signal after each)

(The secondary code can be changed like the main code. With the main code, the secondary code can be deleted. The main code cannot be deleted.)

Time Delay (max. 99 min) and open window (max. 19 min)

Press and hold key "9" until double signal. The light remains on during the following actions.

- enter manager code (double signal)
- enter time delay and open window time, f.i. 2612 for 26minutes time delay and 12minutes open window (double signal)
- repeat values (double signal)

Note: changing the time delay values can only be done in open window time.

If you want to delete the time delay, please repeat the above mentioned procedure and enter 0001 instead of 2612. (00 for Time delay and 01 for Openwindow)



EM2020 USER INSTRUCTIONS

ENGLISH

The lock operates with a numeric six-digit code or a word with 6 letters. A secondary code can be added. Each key press is confirmed with an audio and light signal.

GENERAL

After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

Open: (see fig. A)

Enter code (factory code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. *If code entry failed on first attempt wait 20 seconds before re-entering. Three long beeps indicate the lock bolt is jammed. Release the handle and re-enter code.*

Locking:

Close door and turn handle fully to closing position. The lock is secured. Control blocking status by trying to turn handle back.

Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

Activate the second opening code: (see fig. B)

Press and hold key [1] until double signal. The light remains on during the following actions.

- Enter main code.
- Enter Secondary code twice (Double signal after each)

(The secondary code can be changed like the main code. With the main code, the secondary code can be deleted. The main code cannot be deleted.)

Time Delay (max. 99 min) and open window (max. 19 min)

Press and hold key "9" until double signal. The light remains on during the following actions.

- enter manager code (double signal)
- enter time delay and open window time, f.i. 2612 for 26minutes time delay and 12minutes open window (double signal)
- repeat values (double signal)

Note: changing the time delay values can only be done in open window time.

If you want to delete the time delay, please repeat the above mentioned procedure and enter 0001 instead of 2612. (00 for Time delay and 01 for Openwindow)



OPEN



fig. A



ADD SECOND USER

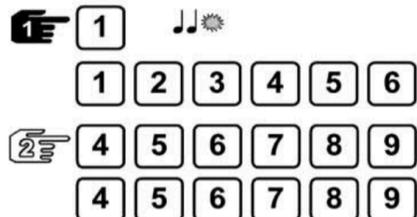


fig. B



CHANGE FACTORY SET CODE

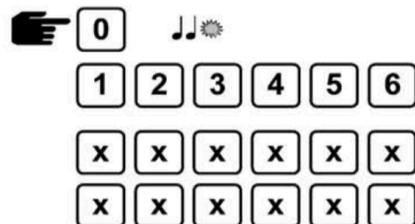


fig. C



DELETE SECOND USER



fig. D



NOTE:
= press and hold until double signal and light stays ON



SECURIKEY®

M•LOCKS