

# 66E SERIES COMBINATION LOCK USER OPERATING INSTRUCTIONS

Enter each digit SLOWLY and DISTINCTLY. The lock signals at each entry.

# TO OPEN THE LOCK

- Enter your combination. The lock will signal twice.
- Turn the keypad clockwise to open the lock.

## TO CLOSE THE LOCK

- Close the safe door.
- Turn safe keypad anti-clockwise until it is straight.

### CHANGING COMBINATION

- Open the safe door
- Enter six zeros
- Enter old combination
- Enter new combination <u>TWICE</u>
- INCORRECT COMBINATION CHANGE the lock signals three times and the old combination remains valid.
- TEST THE NEW COMBINATION SEVERAL TIMES BEFORE CLOSING THE SAFE.

### WRONG TRY PENALTY

- The entry of four consecutive invalid combinations will start a 5-minute delay. The keypad flashes at 10 second intervals.
- At the end of penalty period, two more consecutive invalid combinations will restart the 5-minute delay period.