

AUDITCON

52V & R SERIES COMBINATION LOCK

SIMPLE OPERATING INSTRUCTIONS

Enter each digit **SLOWLY AND DISTINCTLY**. The lock signals at each entry.

TO POWER THE LOCK :

- Turn the dial briskly left and right until you get a double beep accompanied by double red & green flash
- Leave the dial, so the red area is covered

TO OPEN LOCK : The factory combination is 50-25-50

- Power the lock
- Enter your combination. The lock will signal with a green flash
- Turn the keypad clockwise to open the lock.

TO CLOSE THE LOCK

- Close the safe door.
- Turn the keypad anti clockwise until it is straight.

CHANGING THE COMBINATION

- Power the lock
- Push "Enter" then "1"
- Enter old combination
- Enter new combination **TWICE**
- **INCORRECT COMBINATION CHANGE** : The lock signals three times and the old combination is still valid.
- Test the new combination several times before closing the safe.

WRONG TRY PENALTY

- The entry of five consecutive invalid combinations will start a 3-minute delay period. The keypad flashes red at 10-second intervals.
- At end of penalty period, each consecutive invalid combinations will restart the 3-minute delay period.