


Fingerprint Cam Lock - Operating Instructions

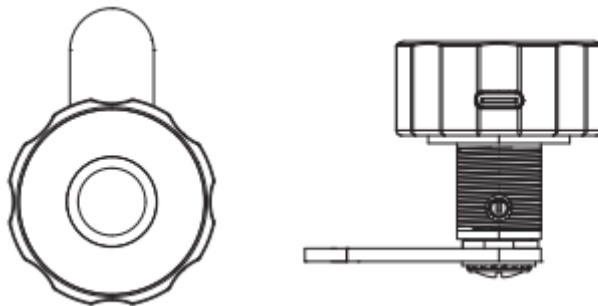

Features:

- Biometric sensor with high sensitivity
- Up to 10 Fingerprint capacity
- Elegant zinc alloy panel design

Locking / Unlocking


- The factory default programming allows any fingerprint to open the lock
- Once a fingerprint has been registered, only programmed fingerprints can open the lock
- A green light will indicate the fingerprint has been accepted and will unlock
- A red light will flash once to indicate the fingerprint was unsuccessful or not registered, and will remain locked

Registering fingerprints

Administrator Fingerprints:

The first 2 fingerprints registered will be the Administrator fingerprints.

1. Place the finger to be registered on the sensor for approximately 20-30 seconds. When the green light flashes for the second time - release your finger.
2. A blue light will illuminate indicating the lock is ready for registration.
3. Place the finger to be registered on the sensor, the blue light will flash green
4. Release your finger - the blue light will illuminate again
5. Repeat steps 3 & 4 in quick succession until the green light illuminates for 2 seconds - fingerprint registration is successful

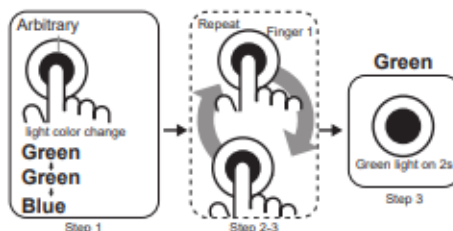


- A blue light will illuminate after the first successful registration to accept a second administrator fingerprint for registration.
- After 2 successful administrator fingerprints have been registered, the blue light will indicate that User fingerprints are ready for registration. This process will exit automatically if not operated after 5 seconds.

SECURIKEY®



User Fingerprints:

1. Place the **Administrator fingerprint** on the sensor for approximately 20-30 seconds, waiting for the green light to illuminate for the second time, then release your finger
2. A blue light will illuminate indicating the lock is ready for registration.
3. Place the finger to be registered on the sensor, the blue light will illuminate green
4. Release your finger - the blue light will illuminate again
5. Repeat steps 3 & 4 in quick succession until the green light illuminates for 2 seconds - fingerprint registration is successful

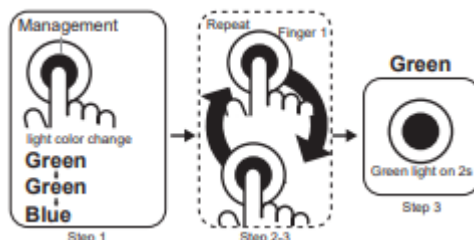

- A blue light will illuminate after the first successful registration to accept a second user fingerprint for registration.
- This process will exit automatically if not operated after 5 seconds.

Removing fingerprints

Method 1:

1. Place an **administrator registered fingerprint** on the sensor until a red light illuminates (Approximately 40-60 seconds)
2. Once the fingerprint is removed from the sensor - all fingerprints will be removed returning it to factory default (any fingerprint can open the lock)

Method 2:

1. Insert the "E-Key" into the USB charging slot
2. Place any fingerprint on the sensor until a red light illuminates
3. Once the fingerprint is removed from the sensor - all fingerprints will be removed returning it to factory default (any fingerprint can open the lock)
4. Remove the "E-Key" from the charging slot

Charging the lock

If a red light flashes while unlocking, the battery is low and will need to be charged using a USB-C cable or power bank. A blue light will flash during charging, and will illuminate green once fully charged

E-Key

If the E-Key is inserted, any fingerprint placed on the sensor will allow it to be unlocked, functioning as an override method - You can only use the E-Key once in this manner (Remove and re-insert to repeat this function)