

STRONGBOX INSTALLATION INSTRUCTIONS INTO WOODEN FLOOR JOISTS

Decide the position for your Strongbox floorboard safe.

Remove the sections of floorboard to expose the joists (If the joists are not 400mm centres, screw a piece of timber to one joist to make the gap between the joists measure 350mm). *Figure 1*

Place the Strongbox in position between and resting upon the joists.

Mark a pencil line around the flanges and the chisel out the required amount of timber to allow the safe to sit flush with the joist tops.

The Strongbox now sits flush on the joists and will allow the original covering to be re-instated and the safe will be hidden. *Figure 2*

Mark the position for the four coach screws through the holes in the side of the safe onto the joists.

Remove the Strongbox and drill four pilot holes where you have marked.

Replace the strongbox and secure in position with the coach screws provided. *Figure3*

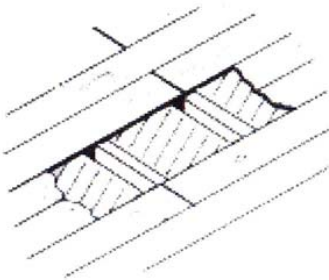


Figure 1



Figure 2

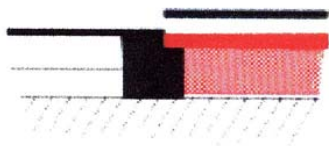


Figure 3